

Ninja BB Installation Instructions



IMPORTANT NOTICE:

- Do not alter this product in any way as it can cause unseen damage. Any modifications to this product will void the warranty.
- TOKEN suggests taking your bottom bracket to your local authorized TOKEN dealer for installation, service and adjustments.
- Read the user's guide before installation and use. Follow all instructions carefully. If you have any questions, don't ride the bike. Take it to your local TOKEN dealer for assistance.

BEFORE RIDING:


- Check that there is no side-to-side movement in the bottom bracket. Also check that the cranks spin smoothly. If there is movement or the bottom bracket is not smooth, take the bicycle to your local TOKEN dealer for service or replacement.
- Ensure that the cranks are firmly attached to the bottom bracket. Improperly attached cranks can become detached from the bicycle and serious injury can result. Never ride a bicycle with improperly attached cranks.

AFTER RIDING:

- When cleaning the bottom bracket, only use mild soap and water. Never spray the bottom bracket with high-pressure water. Water can enter the bottom bracket and cause it to wear prematurely.

WARRANTY:

All TOKEN products are guaranteed against defects in materials or workmanship for two (2) years from the original date of purchase. This warranty applies to the original owner only and is not transferable. The warranty is considered void if resold. The warranty does not cover normal wear and tear or damage from abuse. Please see our website or contact your local dealer or distributor for more details.

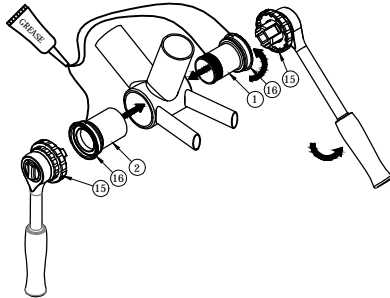

Step 1

Apply thin layer of grease to adaptors and threads.

Step 2

Thread the (1) drive side cup clockwise into the (2) non-drive side cup by hand until the BB cups touch the bottom bracket shell.

Step 3

Hold non-drive side stationary with (15) BB Installation Tool and 1/2" drive wrench.

Step 4

Use a torque wrench with the (15) BB Installation Tool to tighten to 25-30 N.m (221-266 in-lb)

Step 5

Install any necessary adaptor, according to chart.

Note: This bottom bracket requires a tool to press it into the frame. If the bottom bracket cup can be pressed in by hand, without a tool, #C3 cup adaptors (not included) may be required. Contact your local dealer, or TOKEN via our website, for more information.

www.tokenproducts.com

		BB386 CRANKSET																						
BB386 FRAME (46x86.5mm)	<p>MODEL: TF4630-M TF4630-M-TBT</p> <table border="1"> <thead> <tr> <th>No.</th> <th>Description</th> <th>Q'ty</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Right Cup</td> <td>1</td> </tr> <tr> <td>2</td> <td>Left Cup</td> <td>1</td> </tr> <tr> <td>4</td> <td>φ30mm Side Cover</td> <td>2</td> </tr> <tr> <td>15</td> <td>Installation Tool</td> <td>2</td> </tr> <tr> <td>16</td> <td>0.6mm Spacer</td> <td>2</td> </tr> </tbody> </table>	No.	Description	Q'ty	1	Right Cup	1	2	Left Cup	1	4	φ30mm Side Cover	2	15	Installation Tool	2	16	0.6mm Spacer	2					
	No.	Description	Q'ty																					
1	Right Cup	1																						
2	Left Cup	1																						
4	φ30mm Side Cover	2																						
15	Installation Tool	2																						
16	0.6mm Spacer	2																						
		BB30 ROAD CRANKSET																						
PF30 FRAME (46x68mm)	<p>MODEL: TF4630-M TF4630-M-TBT</p> <table border="1"> <thead> <tr> <th>No.</th> <th>Description</th> <th>Q'ty</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Right Cup</td> <td>1</td> </tr> <tr> <td>2</td> <td>Left Cup</td> <td>1</td> </tr> <tr> <td>4</td> <td>φ30mm Side Cover</td> <td>2</td> </tr> <tr> <td>15</td> <td>Installation Tool</td> <td>2</td> </tr> <tr> <td>16</td> <td>0.6mm Spacer</td> <td>2</td> </tr> </tbody> </table>	No.	Description	Q'ty	1	Right Cup	1	2	Left Cup	1	4	φ30mm Side Cover	2	15	Installation Tool	2	16	0.6mm Spacer	2					
	No.	Description	Q'ty																					
1	Right Cup	1																						
2	Left Cup	1																						
4	φ30mm Side Cover	2																						
15	Installation Tool	2																						
16	0.6mm Spacer	2																						
		SRAM 11S Single MTB CRANKSET																						
PF30 FRAME (φ46x73mm)	<p>MODEL: TF4630-M TF4630-M-TBT</p> <table border="1"> <thead> <tr> <th>No.</th> <th>Description</th> <th>Q'ty</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Right Cup</td> <td>1</td> </tr> <tr> <td>2</td> <td>Left Cup</td> <td>1</td> </tr> <tr> <td>4</td> <td>φ30mm Side Cover</td> <td>2</td> </tr> <tr> <td>15</td> <td>Installation Tool</td> <td>2</td> </tr> <tr> <td>16</td> <td>0.6mm Spacer</td> <td>2</td> </tr> <tr> <td>17</td> <td>9.1mm Spacer</td> <td>1</td> </tr> </tbody> </table>	No.	Description	Q'ty	1	Right Cup	1	2	Left Cup	1	4	φ30mm Side Cover	2	15	Installation Tool	2	16	0.6mm Spacer	2	17	9.1mm Spacer	1		
	No.	Description	Q'ty																					
1	Right Cup	1																						
2	Left Cup	1																						
4	φ30mm Side Cover	2																						
15	Installation Tool	2																						
16	0.6mm Spacer	2																						
17	9.1mm Spacer	1																						
		SRAM 10S Double/Triple MTB CRANKSET																						
PF30 FRAME (φ46x73mm)	<p>MODEL: TF4630-M TF4630-M-TBT</p> <table border="1"> <thead> <tr> <th>No.</th> <th>Description</th> <th>Q'ty</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Right Cup</td> <td>1</td> </tr> <tr> <td>2</td> <td>Left Cup</td> <td>1</td> </tr> <tr> <td>4</td> <td>φ30mm Side Cover</td> <td>2</td> </tr> <tr> <td>15</td> <td>Installation Tool</td> <td>2</td> </tr> <tr> <td>16</td> <td>0.6mm Spacer</td> <td>2</td> </tr> <tr> <td>18</td> <td>14.45mm Spacer</td> <td>1</td> </tr> </tbody> </table>	No.	Description	Q'ty	1	Right Cup	1	2	Left Cup	1	4	φ30mm Side Cover	2	15	Installation Tool	2	16	0.6mm Spacer	2	18	14.45mm Spacer	1		
	No.	Description	Q'ty																					
1	Right Cup	1																						
2	Left Cup	1																						
4	φ30mm Side Cover	2																						
15	Installation Tool	2																						
16	0.6mm Spacer	2																						
18	14.45mm Spacer	1																						